



S1029

Solenoid valve replacement

PROBLEM

SOLUTION

- If Solenoid valve is not working even after cleaning, then there may be some internal damage to it

Solenoid valve with coil will need to be changed



REQUIRED TOOLS

4mm Allen Key (L Key)



ADVISORY

Turn OFF power supply of the gas generator



CAUTION

Instructions below should only be done when the solenoid valve is powered off

- Remove air inlet tube (Instrument air) from solenoid valve.



CAUTION

Instructions below should only be done when the instrument air has been disconnected from the solenoid valve.

- Disconnect the control wire from coil




- Open solenoid valve by using Allen key



- Replace solenoid valve with coil



- Reconnect instrument air tube

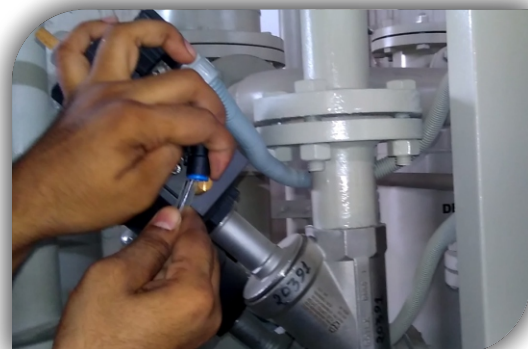

- Restart gas generator



PLEASE WATCH THE VIDEO, LINK BELOW

<https://www.youtube.com/watch?v=tdrB9qGXtLA>